

## In Boat Assistant for Coxmate SRT+



**Turning ON:**

**Turning ON with backlight:** for 2 seconds

**Turning OFF:** for 2 seconds or unit will turn off automatically.

**To set time/date or alarm clock:** Press **Ent** when displayed on start up, then use **[+]** and **[-]** and **Ent** to adjust. Clock is 24hr

**Check battery:** Displays **Batt %** on start up or press **Vol [+]** or **[-]** for 2 seconds.

Note: If battery is too low, audio will be turned OFF.

**Adjust Vol:** Use **Vol [+]** and **[-]**

**Mute:** **Vol [+]** and **[-]** at same time. Press either **Vol [+]** or **[-]** to release.

**Timer:** Use buttons: **Start**, **Stop** and **Lap/Reset**. Status displayed: Ready (**Rdy**) – displayed at start up and after reset, Set (**Set**) – timer will start from seat sensor or press of **Start**; Stop (**StP**); Lap (**LAP**)- will revert back to run after 5 seconds.

**Recall:** Press **Menu** when in Ready(**Rdy**). Rating or time intervals can be recalled. Press **[+]** to toggle between rating(**rtE**) and time interval(**Int**) and **Ent** to select. For rate, display will show average and total time. Step though with **[+]** and **[-]**. Time increments are 15 seconds, but can be changed to/from 30 seconds by **Vol [+]**. To step through intervals, use **[+]** and **[-]** – interval is recorded every time **Lap/Reset** pressed. **Menu** to exit.

**Metronome:** Press **Menu** twice when in Ready(**Rdy**). **Ent** and **[+]** to turn on, and, **Ent** and **[+]** and **[-]** to adjust. **Menu** to exit.

## In Boat Assistant for Coxmate SRT+



**Turning ON:**

**Turning ON with backlight:** for 2 seconds

**Turning OFF:** for 2 seconds or unit will turn off automatically.

**To set time/date or alarm clock:** Press **Ent** when displayed on start up, then use **[+]** and **[-]** and **Ent** to adjust. Clock is 24hr

**Check battery:** Displays **Batt %** on start up or press **Vol [+]** or **[-]** for 2 seconds.

Note: If battery is too low, audio will be turned OFF.

**Adjust Vol:** Use **Vol [+]** and **[-]**

**Mute:** **Vol [+]** and **[-]** at same time. Press either **Vol [+]** or **[-]** to release.

**Timer:** Use buttons: **Start**, **Stop** and **Lap/Reset**. Status displayed: Ready (**Rdy**) – displayed at start up and after reset, Set (**Set**) – timer will start from seat sensor or press of **Start**; Stop (**StP**); Lap (**LAP**)- will revert back to run after 5 seconds.

**Recall:** Press **Menu** when in Ready(**Rdy**). Rating or time intervals can be recalled. Press **[+]** to toggle between rating(**rtE**) and time interval(**Int**) and **Ent** to select. For rate, display will show average and total time. Step though with **[+]** and **[-]**. Time increments are 15 seconds, but can be changed to/from 30 seconds by **Vol [+]**. To step through intervals, use **[+]** and **[-]** – interval is recorded every time **Lap/Reset** pressed. **Menu** to exit.

**Metronome:** Press **Menu** twice when in Ready(**Rdy**). **Ent** and **[+]** to turn on, and, **Ent** and **[+]** and **[-]** to adjust. **Menu** to exit.

## In Boat Assistant for Coxmate SRT+



**Turning ON:**

**Turning ON with backlight:** for 2 seconds

**Turning OFF:** for 2 seconds or unit will turn off automatically.

**To set time/date or alarm clock:** Press **Ent** when displayed on start up, then use **[+]** and **[-]** and **Ent** to adjust. Clock is 24hr.

**Check battery:** Displays **Batt %** on start up or press **Vol [+]** or **[-]** for 2 seconds.

Note: If battery is too low, audio will be turned OFF.

**Adjust Vol:** Use **Vol [+]** and **[-]**

**Mute:** **Vol [+]** and **[-]** at same time. Press either **Vol [+]** or **[-]** to release.

**Timer:** Use buttons: **Start**, **Stop** and **Lap/Reset**. Status displayed: Ready (**Rdy**) – displayed at start up and after reset, Set (**Set**) – timer will start from seat sensor or press of **Start**; Stop (**StP**); Lap (**LAP**)- will revert back to run after 5 seconds.

**Recall:** Press **Menu** when in Ready(**Rdy**). Rating or time intervals can be recalled. Press **[+]** to toggle between rating(**rtE**) and time interval(**Int**) and **Ent** to select. For rate, display will show average and total time. Step though with **[+]** and **[-]**. Time increments are 15 seconds, but can be changed to/from 30 seconds by **Vol [+]**. To step through intervals, use **[+]** and **[-]** – interval is recorded every time **Lap/Reset** pressed. **Menu** to exit.

**Metronome:** Press **Menu** twice when in Ready(**Rdy**). **Ent** and **[+]** to turn on, and, **Ent** and **[+]** and **[-]** to adjust. **Menu** to exit.

## In Boat Assistant for Coxmate SRT+



**Turning ON:**

**Turning ON with backlight:** for 2 seconds

**Turning OFF:** for 2 seconds or unit will turn off automatically.

**To set time/date or alarm clock:** Press **Ent** when displayed on start up, then use **[+]** and **[-]** and **Ent** to adjust. Clock is 24hr

**Check battery:** Displays **Batt %** on start up or press **Vol [+]** or **[-]** for 2 seconds.

Note: If battery is too low, audio will be turned OFF.

**Adjust Vol:** Use **Vol [+]** and **[-]**

**Mute:** **Vol [+]** and **[-]** at same time. Press either **Vol [+]** or **[-]** to release.

**Timer:** Use buttons: **Start**, **Stop** and **Lap/Reset**. Status displayed: Ready (**Rdy**) – displayed at start up and after reset, Set (**Set**) – timer will start from seat sensor or press of **Start**; Stop (**StP**); Lap (**LAP**)- will revert back to run after 5 seconds.

**Recall:** Press **Menu** when in Ready(**Rdy**). Rating or time intervals can be recalled. Press **[+]** to toggle between rating(**rtE**) and time interval(**Int**) and **Ent** to select. For rate, display will show average and total time. Step though with **[+]** and **[-]**. Time increments are 15 seconds, but can be changed to/from 30 seconds by **Vol [+]**. To step through intervals, use **[+]** and **[-]** – interval is recorded every time **Lap/Reset** pressed. **Menu** to exit.

**Metronome:** Press **Menu** twice when in Ready(**Rdy**). **Ent** and **[+]** to turn on, and, **Ent** and **[+]** and **[-]** to adjust. **Menu** to exit.