



## Maintenance

### **Your Coxmate unit requires a little maintenance.**

The only routine maintenance required is

- **wiping the electrical connectors with silicone grease,**
- **washing off of any salt/impure water with clean fresh water.**

The silicone grease should be smeared lightly on mating rubber surfaces and inserted into the female silver contacts using the syringe provided. During the rowing season it is recommended that this be undertaken once per month for salt water environments and every 3 months for fresh water environments. Washing down with fresh water should be undertaken every time the system is exposed to salt water. This is especially important for the exposed electrical connectors. The connectors on both the **cable harness** and **control box** should be thoroughly washed if they become exposed to salt water when they are disconnected. Clean fresh water will not harm the system.

It is important for the connector protective caps to be fitted when they are not in use.

## Batteries

It is important that rechargeable batteries are not left uncharged for long periods.

If you are not going to use a rechargeable unit for more than ~2 months, then it is recommended units are left connected to charger via a timer. Charging for 2 hours a week or 15 minutes a day if you only have a 24 hour timer will avoid unnecessary deterioration.

## Reboxing and refurbishing Coxmates

Coxmate offer a 'reboxing service'. This preserves the expensive circuit board and replaces all peripheral items.

We replace

- battery,
- enclosure,
- microphone,
- connectors.

The only two original parts retained are circuit board and headband.

The information here is general in nature and more detailed information specific to individual products may be found in each product manual.